

Your HANDI-TREADS packaging includes installation screws.


You will need these tools to complete the installation:

- Tape measure
- Power drill or screw driver




There are 3 steps included in the proper installation of Handi-Treads on wood. The process is the same if you are installing one tread or one hundred. If you find that you have any questions, don't hesitate to call us.

STEP
1

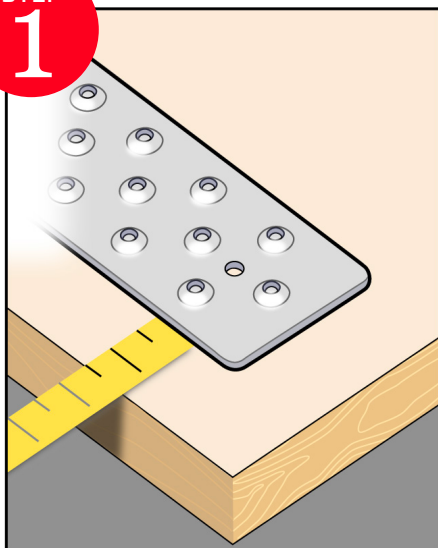


Align your Handi-Tread 3/4" from the front edge of the stair tread and centered on the step.

STEP
2

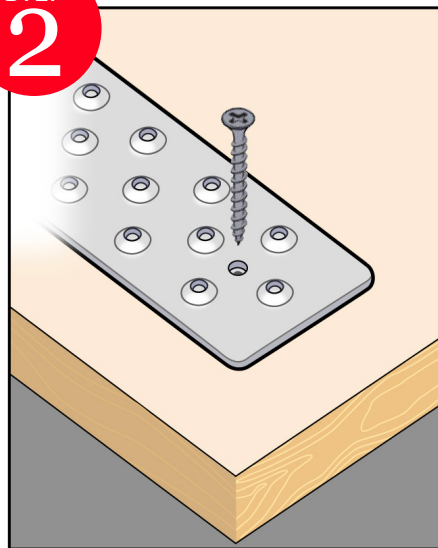

Starting with the middle screw holes, drill your screws into the stair working your way out from the center. Make sure that you are drilling perpendicular to the surface and that you use all of the screw holes provided. **DO NOT** use the raised traction bumps for your screw placement.

STEP
3

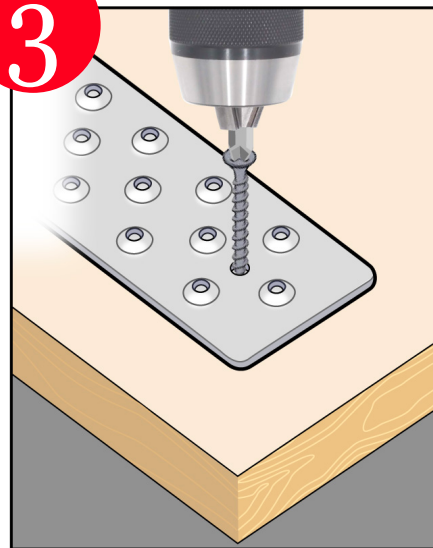

Installation is complete once all screws have been drilled into place. There's no additional maintenance necessary.

Installing the Handi-Treads is just that simple.

Should you have any questions, please call us at (877) 738-7837.